
ariEquipment



M760: Stretcher User manual

Equipment M760

The M760 is an equipment with fixed stretcher and manually operated. Its main objective is the transport of patients with mobility difficulties and post-operation condition. This product is developed and produced by Auto Ribeiro Lda..

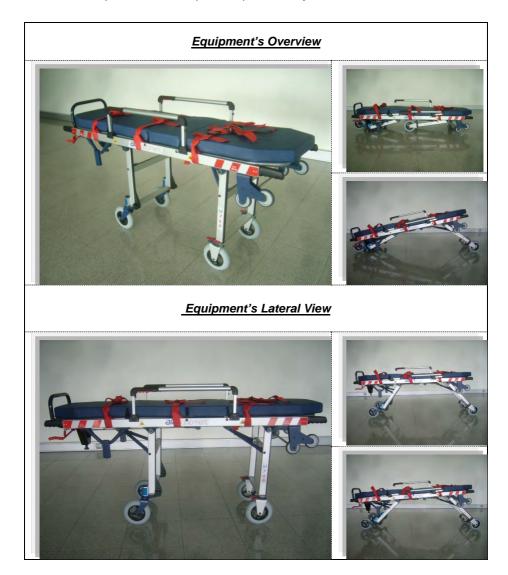

Equipment's Top View







SPECIFICATIONS

- Approximate Weight:43 kg
- Maximum load allowed: 250kg
- Approximate Dimensions (closed):
 1920 x 570 x 475 mm
- Approximate Dimensions (open):
 M760 1920 x 570 x 1015 mm
 M760S 1915 568 930 mm

M760H 1915 568 1090 mm

FRONT LEG CONTROL (Intermediate Position)

Security System 1º - Lift the lever (placed on the right side of the cart).



Final Position.

WHEELS

Swivel Wheels 2 Swivel Wheels Fixed Wheels 2 Fixed Wheels Locking system of the fixed wheels 1º Engage the red system with the foot to lock the wheels.

REAR LEG CONTROL

Security System



1º - Lift the safety lever.



2º - Press the **left** lever until it moves and keep it pressed..

(Note: To put the back leg into halfway, should press the lever and release it immediately)

FRONT LEG CONTROL

Security System



1º - Lift the safety lever.




2° - Press the **right** lever until it moves and keep it pressed..

TELESCOPIC HANDLES

Security System 1º - Press button with finger. 2º - Push or pull to achieve the desired length.

SWING DOWN SIDEARMS

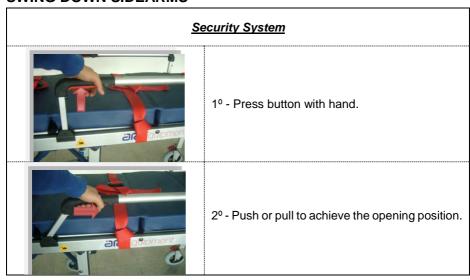

TILTING HEAD

It is possible to adjust head's panel in different positions:



Head's Elevation

- 1º Press the red lever
- 2º Pull or push the head's panel to achieve the desired position







ADJUSTABLE FEET POSITION

Adjustable feet in three different positions:

Footrest and Knees-Flex Position





Lower Legs part Elevation





Legs Elevation





SECURITY INFORMATION





This equipment can be dangerous:

Danger of Entrapment.

WARNING: USE WITH CAUTION!





Danger of Entrapment.

MAINTENANCE



- Perform visual inspection every fifty cycles of use.
- Lubrication bimonthly elements of mechanical operation with high viscosity lubricant.
- Verification of tightness of binding elements quarterly. Make adjustments if necessary.
- Use cleaning products compatible with aluminum, stainless steel and rubber.

ACCESSORIES

Restrains Shoulder Harness restraints Legs and Feet restrains Restrains Instalation 1º - Tying restraint straps in inner bars. 2º - Pass the restraints through the plate slots 3º - Join belt buckles.

ACCESSORIES

IV Pole



IV Pole



IV Pole in use.

Instruments Tray



Instruments Tray



Instruments Tray in use.



Rua de S. Caetano, 551 Apartado 526 4411-701 Canelas; Vila Nova de Gaia, Portugal Telf: +351 227157100 , Fax: +351 2271244 support@arequipment.com

www.arequipment.com

SERIAL NUMBER

